

How to adjust power output?

- 1) Connect antenna and power supply, the screen shows "OFF"
- 2) Press and hold the Power button for about 3 seconds, the screen will show "H" or "L", H means 15watt, L means 1.5watt.
- 3) Press up or down button to adjust the Power output.

How to adjust the temperature protection point?

- 1) Connect the antenna
- 2) Press and hold the power button
- 3) Connect the Power supply
- 4) The screen will show the temperature protection point, default is 70degrees.
- 5) Press up or down button to adjust the temperature.

Adjust frequency range

**Press and hold** the power button

**Plug in the power supply**, Unpress(unhold) the power button, The screen show "H" or "L"

Press one time power button ,the Screen show the high-frequency ,you may use UP & Down to change it to 108mhz (over 108.1 will not work)

Press one time power button ,the Screen show the low-frequency ,you may use UP & Down to change it to 87mhz (low than 76mhz will not work)

Press one time power button ,unplug the power supply.

Plug in the power supply ,and it will work in 87-108mhz now .